

MOVINCOOL®

SPARE PARTS CATALOG

CLIMATE PRO® D18


SERIAL NUMBER LOCATION



TABLE OF CONTENTS

SERIAL NUMBER LOCATION	2
Unit Part No: 484000-4750/ 484000-4751	
Unit Serial No. Range: 1119****D18 to 0422****D18	
Main Structure Parts	4
Bumper Panel Parts	8
Refrigeration Parts	10
Blower Parts	12
Control Box Parts_1	14
Control Box Parts_2 (Serial No. Range: 1221****D18 to 0422****D18)	16
Control Box Parts_2 (Serial No. Range: 1119****D18 to 1121****D18)	18
REFERENCE TABLE	20

Main Structure Parts

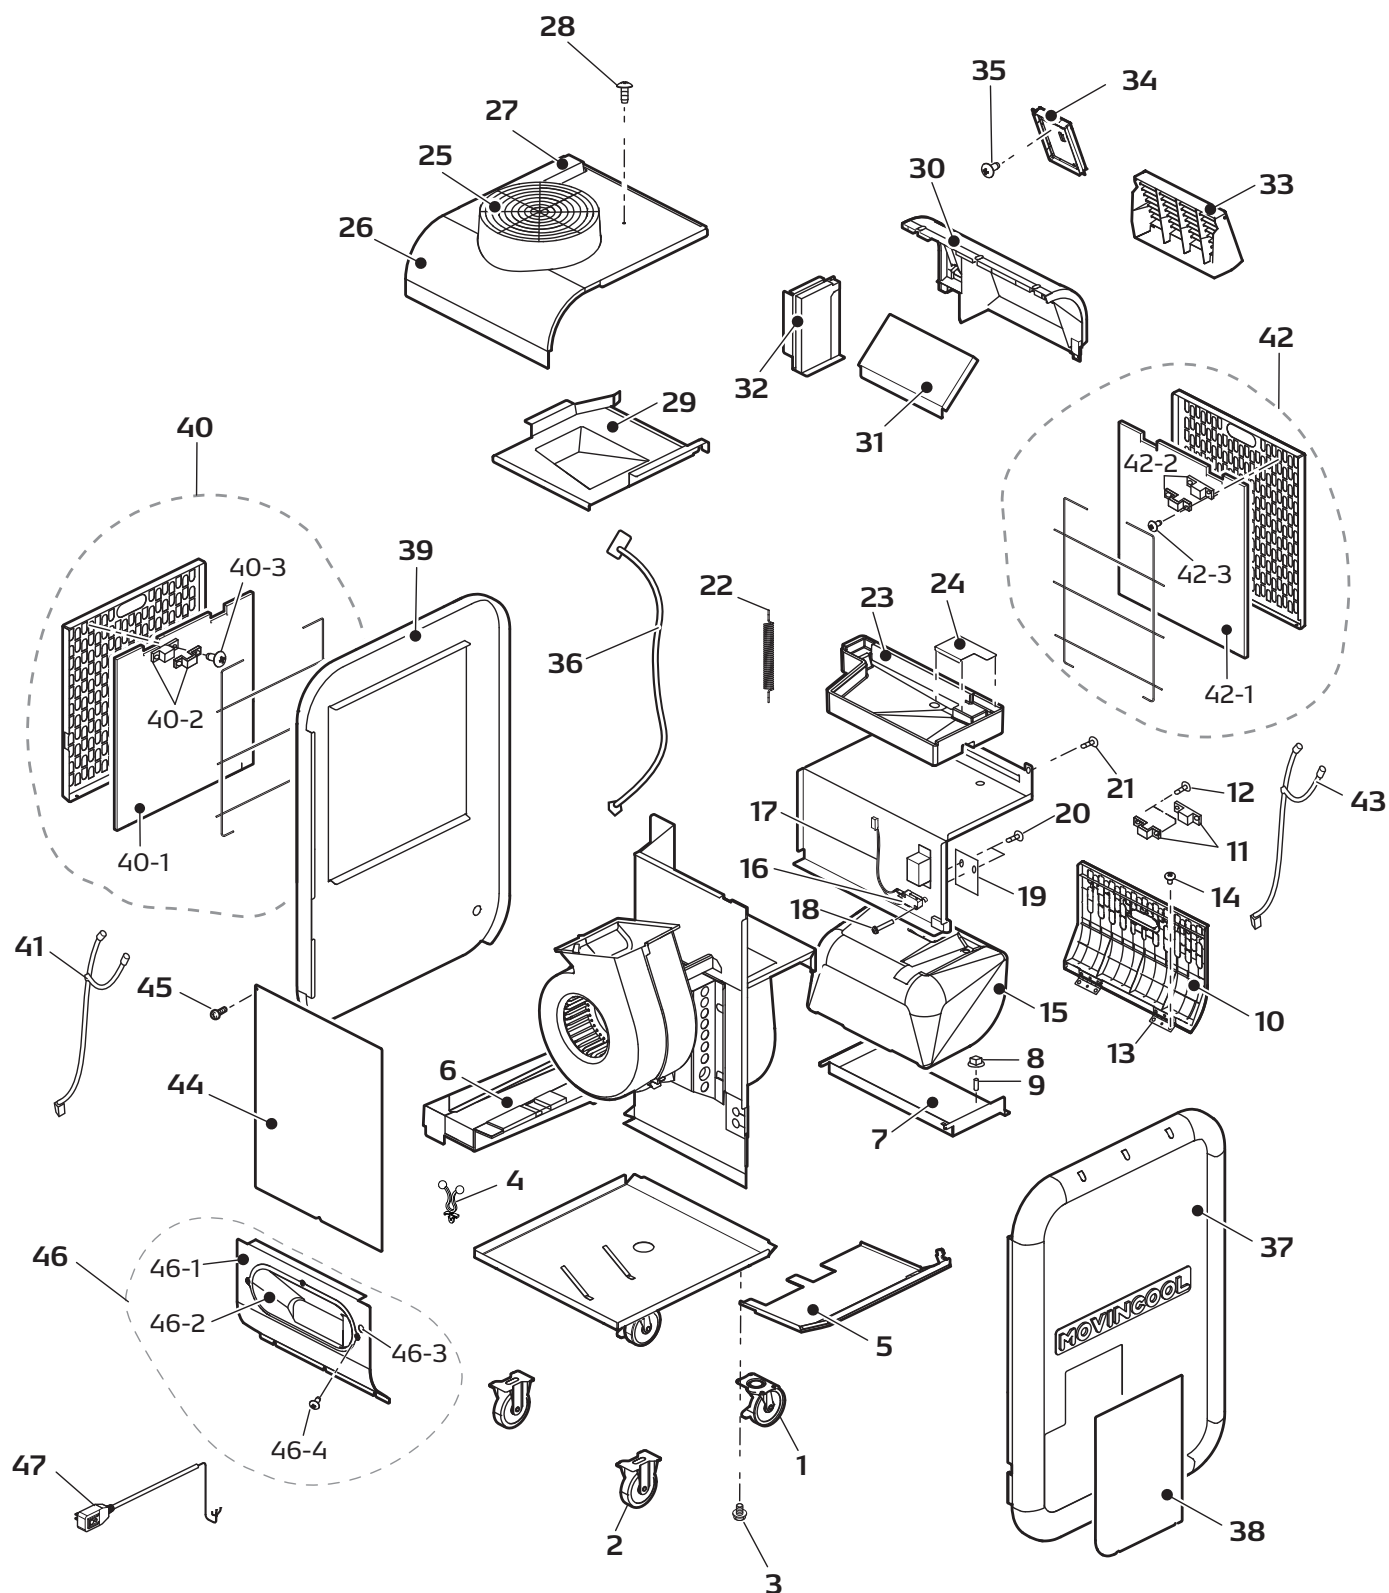

Unit Part No: 484000-4750/ 484000-4751
 Unit Serial No. Range: 1119****D18 to 0422****D18

Y048

MOVINGCOOL

Main Structure Parts


No.	NAMES OF PARTS	PART No.	QTY	S/N RANGE*1	REMARKS*2
1	Caster, w/Brake	484702-0560	2		
2	Caster	484702-0570	2		
3	Bolt, w/Washer	91570-08201	8		M8 x 1.25, L=20
4	Clamp	473459-0050	2		For Wire
5	Drain Pan Support	484470-5560	1		
6	Drain Pan Assy	484430-0930	1		w/ Heater
7	Frame Sub-Assy	484301-6750	1		
8	Nut	949056-1501	8		
9	Spacer, Metal	482837-0610	2		
10	Drain Tank Cover	484490-0910	1		
11	Latch & Strike	484927-1580	2		
12	Screw, Tapping	482801-2870	4		D=3, L=8
13	Hinge	484912-0200	2		
14	Screw	949006-8410	4		M4 x 0.7, L=5
15	Drain Tank	484731-0300	1		
16	Switch, Drain Tank	484502-0520	1		
17	Wire Assy	481950-3450	1		For Drain Tank
18	Screw w/Washer	91310-03161	2		M3 x 0.5, L=16
19	Connector Cover Plate	484311-4100	1		
20	Bolt	480919-1820	2		M4 x 0.7, L=10 Black
21	Screw, Tapping	482801-3290	7		
22	Spring, Tension Coil	949171-2090	2		For Drain Tank
23	Pan Assy, Drain	484430-0871	1		
24	Bracket	484321-4831	1		
25	Round Duct	484351-1120	1		
26	Panel Sub Assy	484470-5550	1		
27	Antenna	484500-5041	1		w/Wire
28	Bolt	480919-1820	6		M4 x 0.7, L=10 Black
29	Bracket, Sub-Assy	484320-1010	1		
30	Panel Assy, Top Front	484390-1400	1		
31	Deflector Air	484320-0810	1		
32	Stay, Control Panel, Left	484320-0890	1		
33	Louver, Air Outlet	480431-0130	1		
34	Controller Assy	484500-5220	1		Operation Panel
35	Screw, Tapping	482801-2920	4		D=4, L=12

*1 Refer to page 2 for the position of the serial number on the unit. This column shows the first four digits of the serial number.

*2 Refer to the Reference Table on page 20 for more information on the remarks.

Unit Part No: 484000-4750/ 484000-4751
Unit Serial No. Range: 1119****D18 to 0422****D18

Main Structure Parts

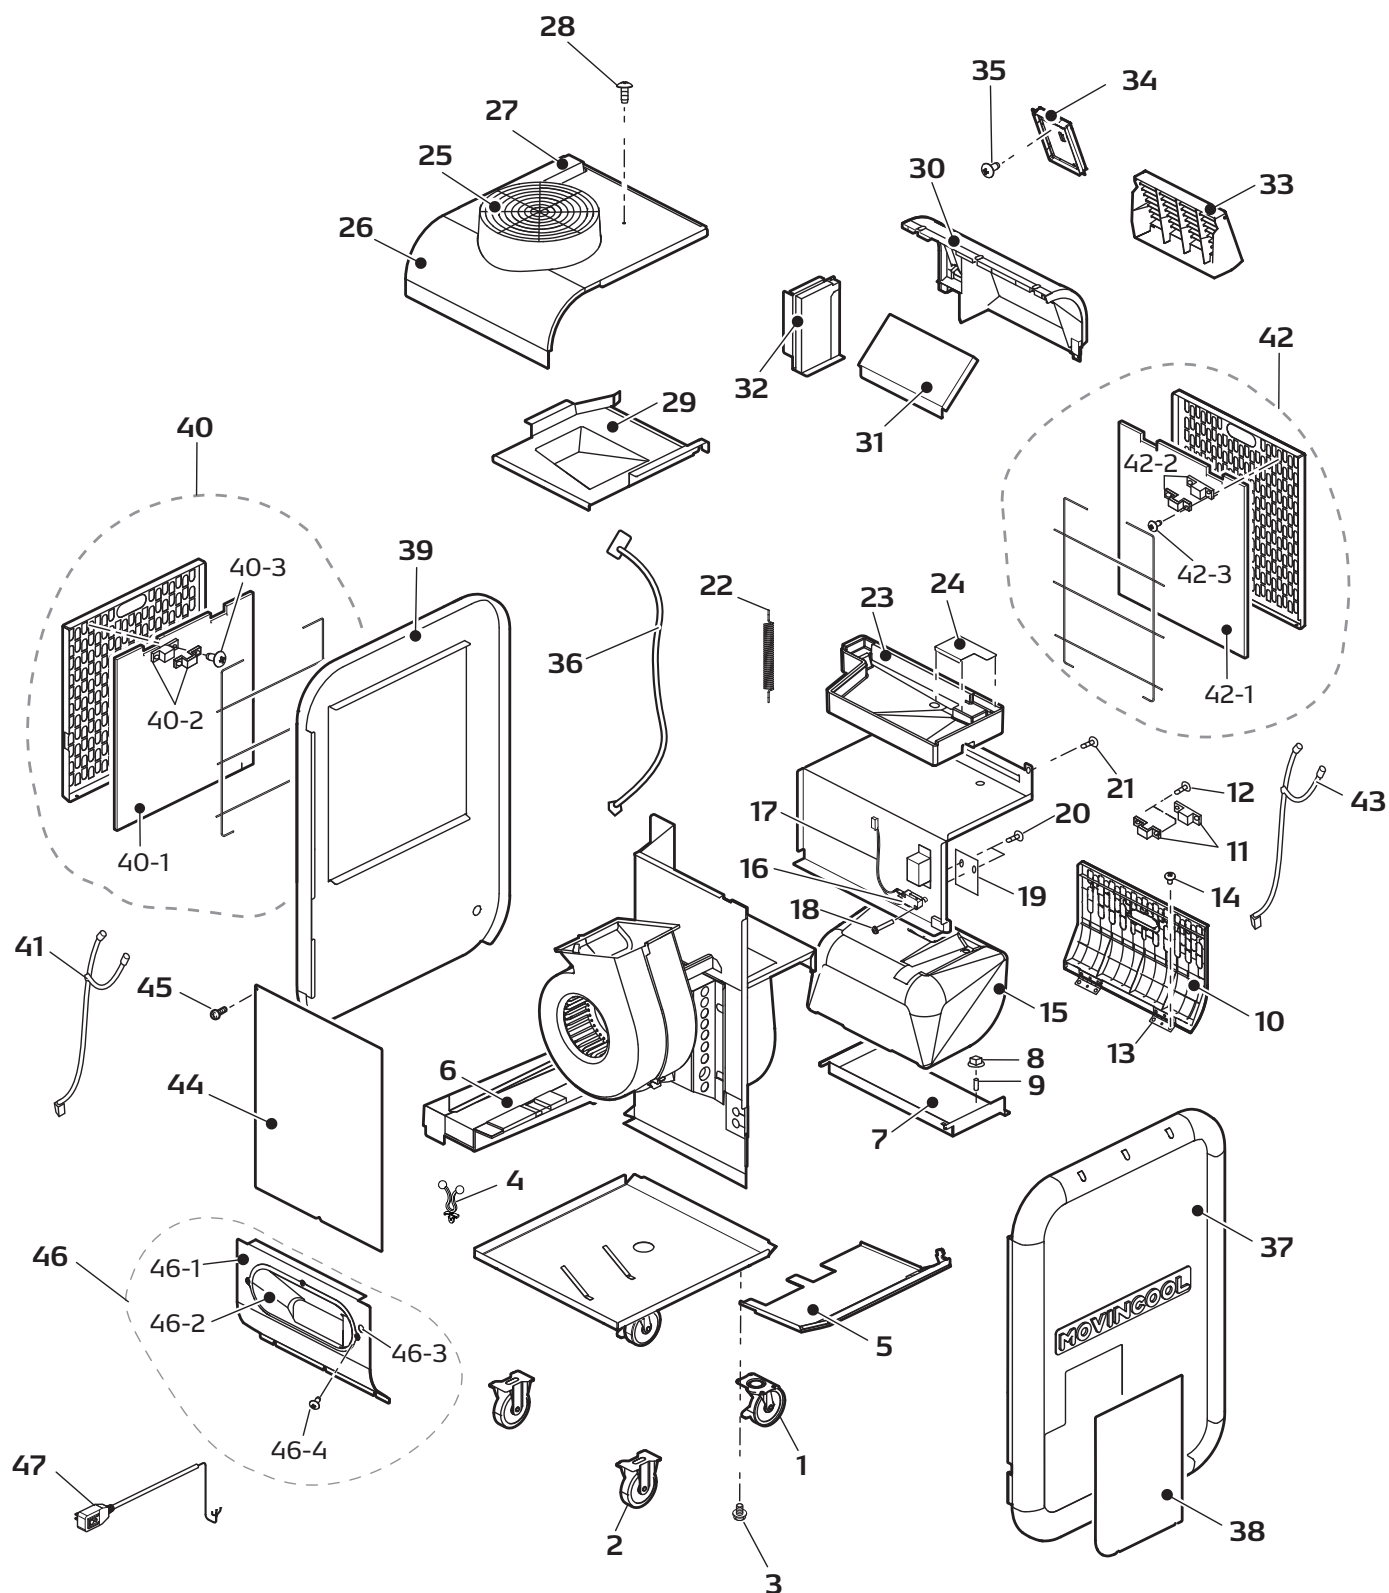

Unit Part No: 484000-4750/ 484000-4751
 Unit Serial No. Range: 1119****D18 to 0422****D18

Y048

MOVINGCOOL

Main Structure Parts

No.	NAMES OF PARTS	PART No.	QTY	S/N RANGE*1	REMARKS*2
36	Wire Assy	481950-3510	1		Main Harness (RB) ↔(CB)
37	Panel Assy, Logo Side	484490-1600	1		No.37-1 to 37-8, See page 8 & 9
38	Panel Assy, Service	484490-1180	1		
39	Panel Assy, Outdoor Side	484490-1200	1		No.39-1 to 39-10, See page 8 & 9
40	Panel Assy, Outdoor Filter	484400-0730	1		Filter Panel, Wire Frame & No.40-1 to 40-3
40-1	Filter, Outdoor	484401-2410	1		
40-2	Latch & Strike	484927-1580	2		
40-3	Screw, Tapping	949006-3300	4		M3 x 0.5, L=6
41	Thermistor Assy	484532-0470	1		ODS
42	Panel Assy, Front Filter	484400-0750	1		Filter Panel, Wire Frame & No.42-1 to 42-3
42-1	Filter, Indoor	484401-2450	1		
42-2	Latch & Strike	484927-1580	2		
42-3	Screw, Tapping	949006-3300	4		M3 x 0.5, L=6
43	Thermistor Assy	484532-0480	1		RTS
44	Panel Assy, Upper Rear	484490-1620	1		
45	Bolt	480919-1820	78		M4 x 0.7, L=10 Black
46	Panel Assy, Lower Rear	484490-0880	1		No.46-1 to 46-4
46-1	Panel	484411-7641	1		
46-2	Power Cord Holder	484521-1631	1		
46-3	Grommet	484926-0750	1		
46-4	Bolt	480919-1820	3		M4 x 0.7, L=10 Black
47	Wire Assy, Power Cord	481950-3561	1		LCDI
	Filter, Plenum	484401-2760	1		For Accessory Plenum (484350-1490)



*1 Refer to page 2 for the position of the serial number on the unit. This column shows the first four digits of the serial number.

*2 Refer to the Reference Table on page 20 for more information on the remarks.

Unit Part No: 484000-4750/ 484000-4751

Unit Serial No. Range: 1119****D18 to 0422****D18

Bumper Panel Parts

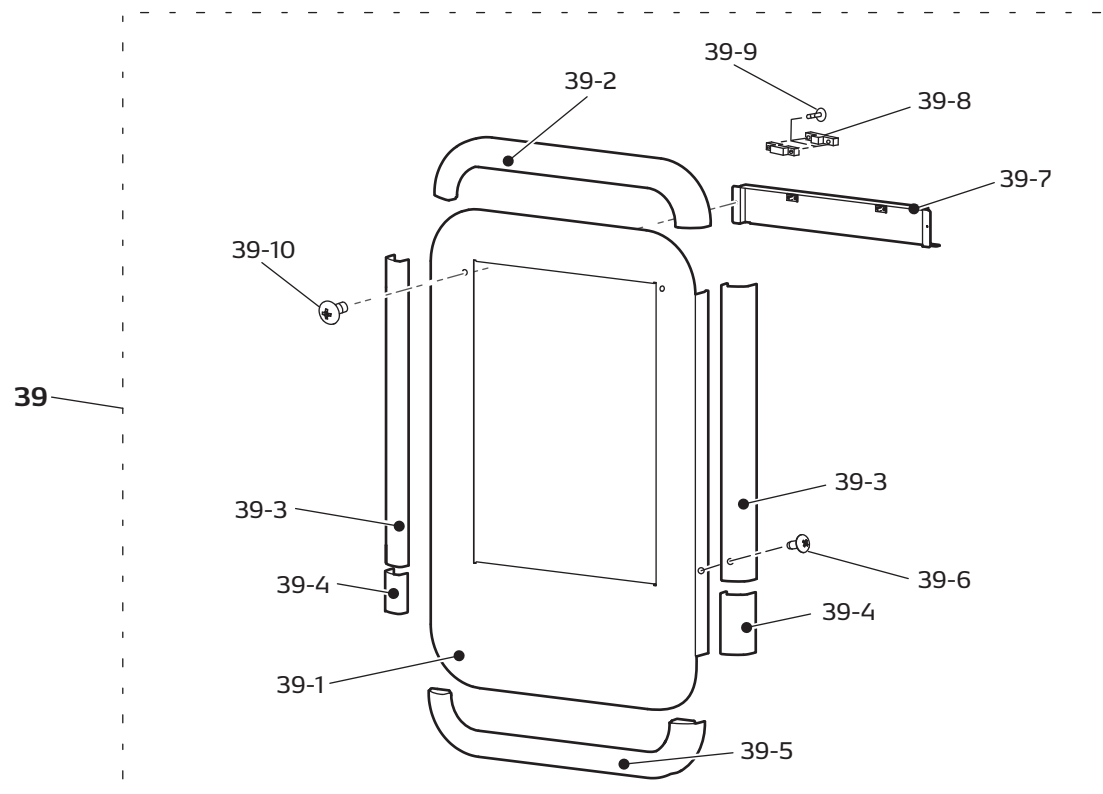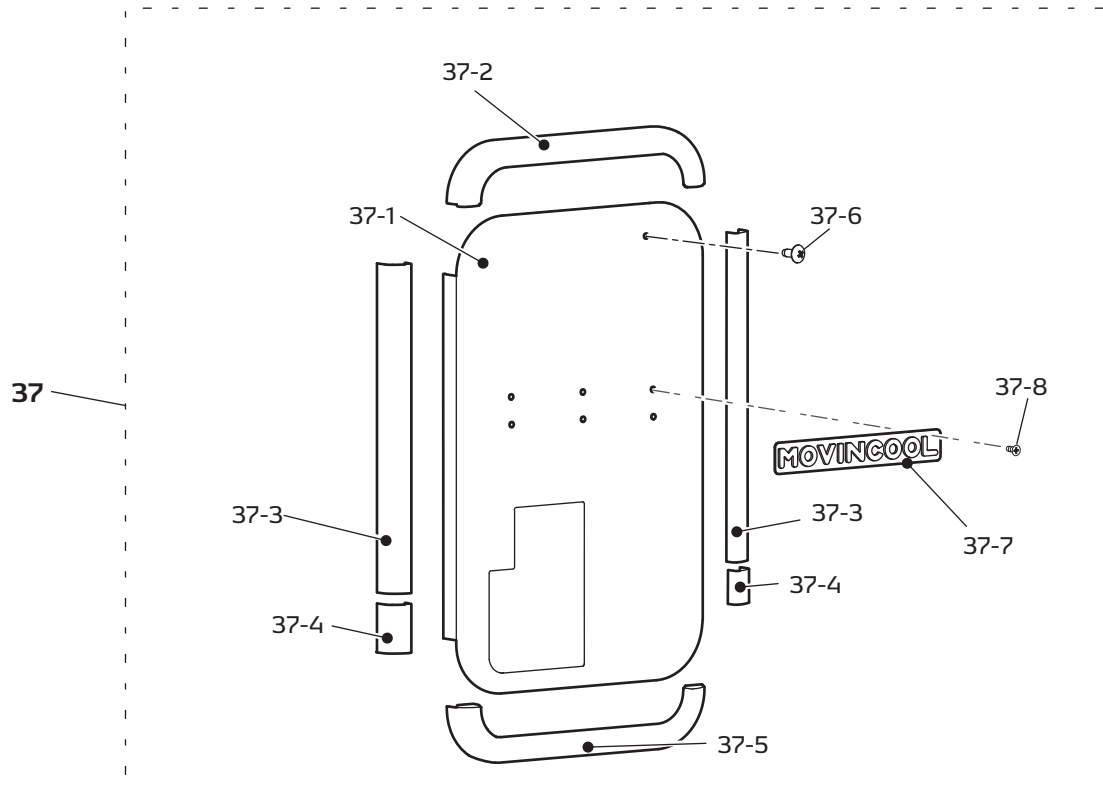

Unit Part No: 484000-4750/ 484000-4751
 Unit Serial No. Range: 1119****D18 to 0422****D18

Y010a

Bumper Panel Parts


No.	NAMES OF PARTS	PART No.	QTY	S/N RANGE*1	REMARKS*2
37	Panel Assy, Logo Side	484490-1600	1		No.37-1 to 37-8
37-1	Panel	484490-1610	1		
37-2	Upper Bumper	484301-6820	1		
37-3	Side Bumper	484301-6830	2		
37-4	Extension Bumper	484301-6850	2		
37-5	Lower Bumper	484301-6840	1		
37-6	Screw, Tapping	482801-3270	13		For Bumper, D4, L=12
37-7	Logo Plate	484311-4110	1		
37-8	Bolt	91060-04088	6		For Logo Plate, M4 × 0.7, L=8
39	Panel Assy, Outdoor Side	484490-1200	1		No.39-1 to 39-10
39-1	Panel	484490-1590	1		
39-2	Upper Bumper	484301-6820	1		
39-3	Side Bumper	484301-6830	2		
39-4	Extension Bumper	484301-6850	2		
39-5	Lower Bumper	484301-6840	1		
39-6	Screw, Tapping	482801-3270	13		For Bumper, D4, L=12
39-7	Stay Assy	484330-1020	1		
39-8	Latch & Strike	484927-1580	2		
39-9	Screw, Tapping	949006-3300	4		M3 x 0.5, L=6
39-10	Bolt	480919-1820	2		M4 x 0.7, L=10 Black

*1 Refer to page 2 for the position of the serial number on the unit. This column shows the first four digits of the serial number.

*2 Refer to the Reference Table on page 20 for more information on the remarks.

Unit Part No: 484000-4750/ 484000-4751
Unit Serial No. Range: 1119****D18 to 0422****D18

Refrigeration Parts

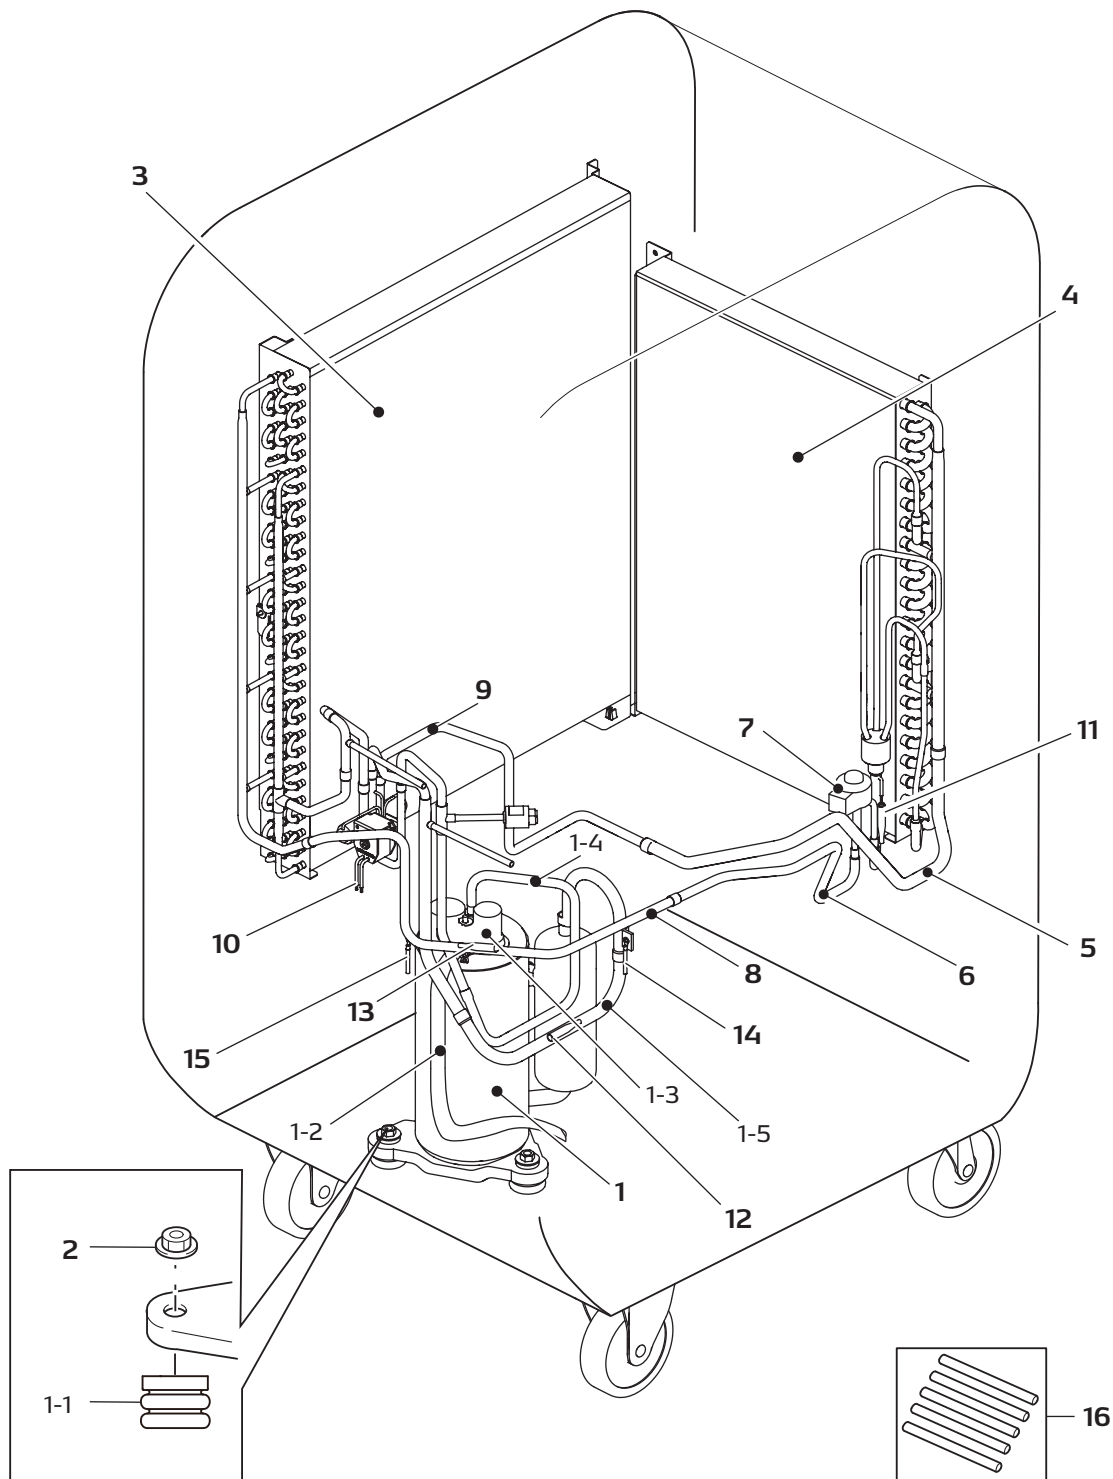

Unit Part No: 484000-4750/ 484000-4751
Unit Serial No. Range: 1119****D18 to 0422****D18

Y032a

Refrigeration Parts


No.	NAMES OF PARTS	PART No.	QTY	S/N RANGE*1	REMARKS*2
1	Compressor Assy	484650-3610	1		w/No.1-1 to 1-5
1-1	Cushion	484904-0510	3		
1-2	Wire Assy	481950-3551	1		For Compressor
1-3	Wire for Overload Relay	481950-3571	1		
1-4	Pipe Assy, Connecting	480261-7860	1		For Discharge
1-5	Pipe Assy, Connecting	484800-6470	1		For Suction
2	Nut	482814-0300	3		w/Washer
3	Outdoor Heat Exchanger Assy	484600-3230	1		
4	Indoor Heat Exchanger Assy	484600-3290	1		
5	Pipe Assy, Connecting	480261-8040	1		To ID Heat Exchanger
6	Pipe Assy, Connecting	484800-6540	1		To ID Heat Exchanger
7	Expansion Valve	484500-5150	1		
8	Pipe Assy, Connecting	484800-6520	1		To OD Heat Exchanger
9	Pipe Assy, Connecting	484800-6720	1		To 4-Way Valve, w/High Pressure Switch
10	4 Way Valve	484500-4460	1		
11	Thermistor Assy	484532-0490	1		CTS2
12	Thermistor Assy	484532-0500	1		CTS3
13	Thermistor Assy	484532-0510	1		CTS1
14	Wire Assy	481950-3520	1		For Ground
15	Wire Assy	481950-3630	1		For Ground
16	Pipe Assy, Charging	484800-0440	1		5 pieces per package

*1 Refer to page 2 for the position of the serial number on the unit. This column shows the first four digits of the serial number.

*2 Refer to the Reference Table on page 20 for more information on the remarks.

Unit Part No: 484000-4750/ 484000-4751
Unit Serial No. Range: 1119****D18 to 0422****D18

Blower Parts

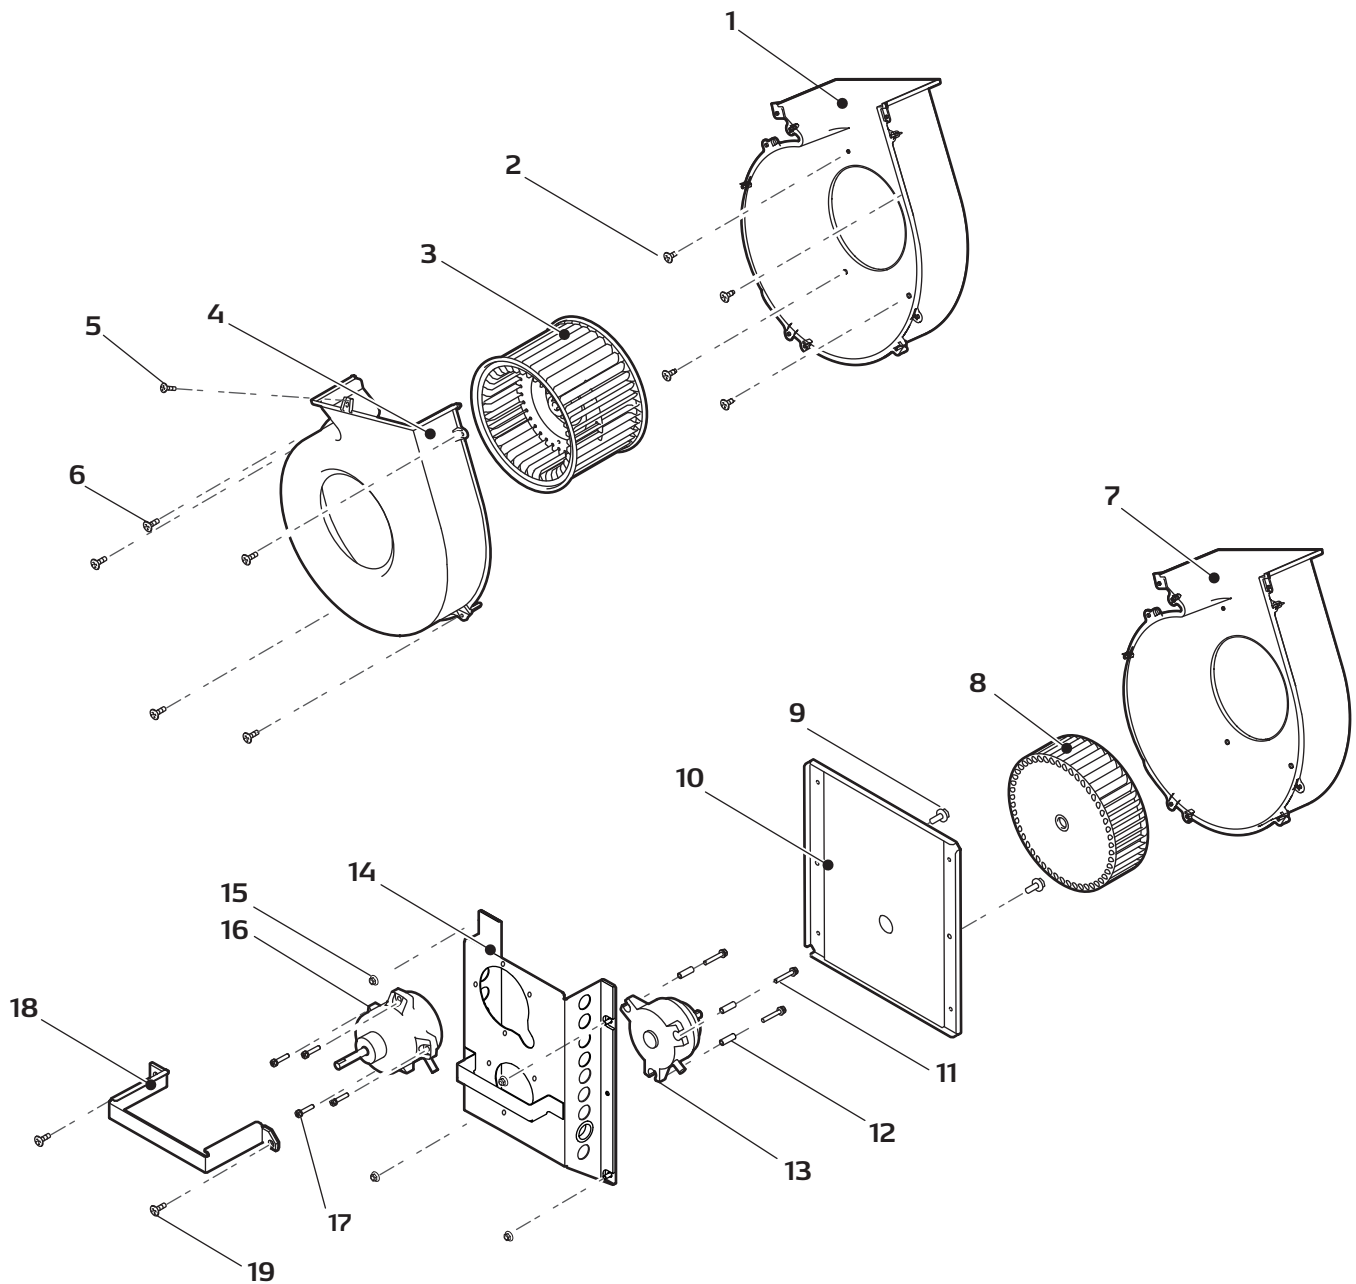

Unit Part No: 484000-4750/ 484000-4751
Unit Serial No. Range: 1119****D18 to 0422****D18

Y031a

Blower Parts


No.	NAMES OF PARTS	PART No.	QTY	S/N RANGE*1	REMARKS*2
1	Casing, Outdoor Fan	480420-0240	1		
2	Bolt	480919-1820	4		M4 x 0.7, L=10 Black
3	Fan, Outdoor	484221-0890	1		
4	Casing Assy, Outdoor Fan	480420-0260	1		
5	Bolt	480919-1820	1		M4 x 0.7, L=10 Black
6	Screw, Tapping	482801-3270	5		D4, L=12
7	Casing Assy, Indoor Fan	480420-0270	1		
8	Fan, Indoor	484221-0910	1		
9	Bolt	480919-1820	2		M4 x 0.7, L=10 Black
10	Motor Stay	484310-7120	1		
11	Bolt, w/Washer	91570-06403	3		M4 x 1, L=40
12	Spacer	484921-0350	3		
13	Fan Motor, Indoor	484211-2440	1		
14	Frame Sub-Assy	484310-7100	1		
15	Nut	949056-1430	4		M6
16	Fan Motor, Outdoor	484211-2450	1		
17	Bolt, w/Washer	91570-06301	4		M6, L30
18	Frame Sub-Assy	484310-7070	1		
19	Bolt	480919-1820	2		M4 x 0.7, L=10 Black

*1 Refer to page 2 for the position of the serial number on the unit. This column shows the first four digits of the serial number.

*2 Refer to the Reference Table on page 20 for more information on the remarks.

Unit Part No: 484000-4750/ 484000-4751
Unit Serial No. Range: 1119****D18 to 0422****D18

Control Box Parts_1

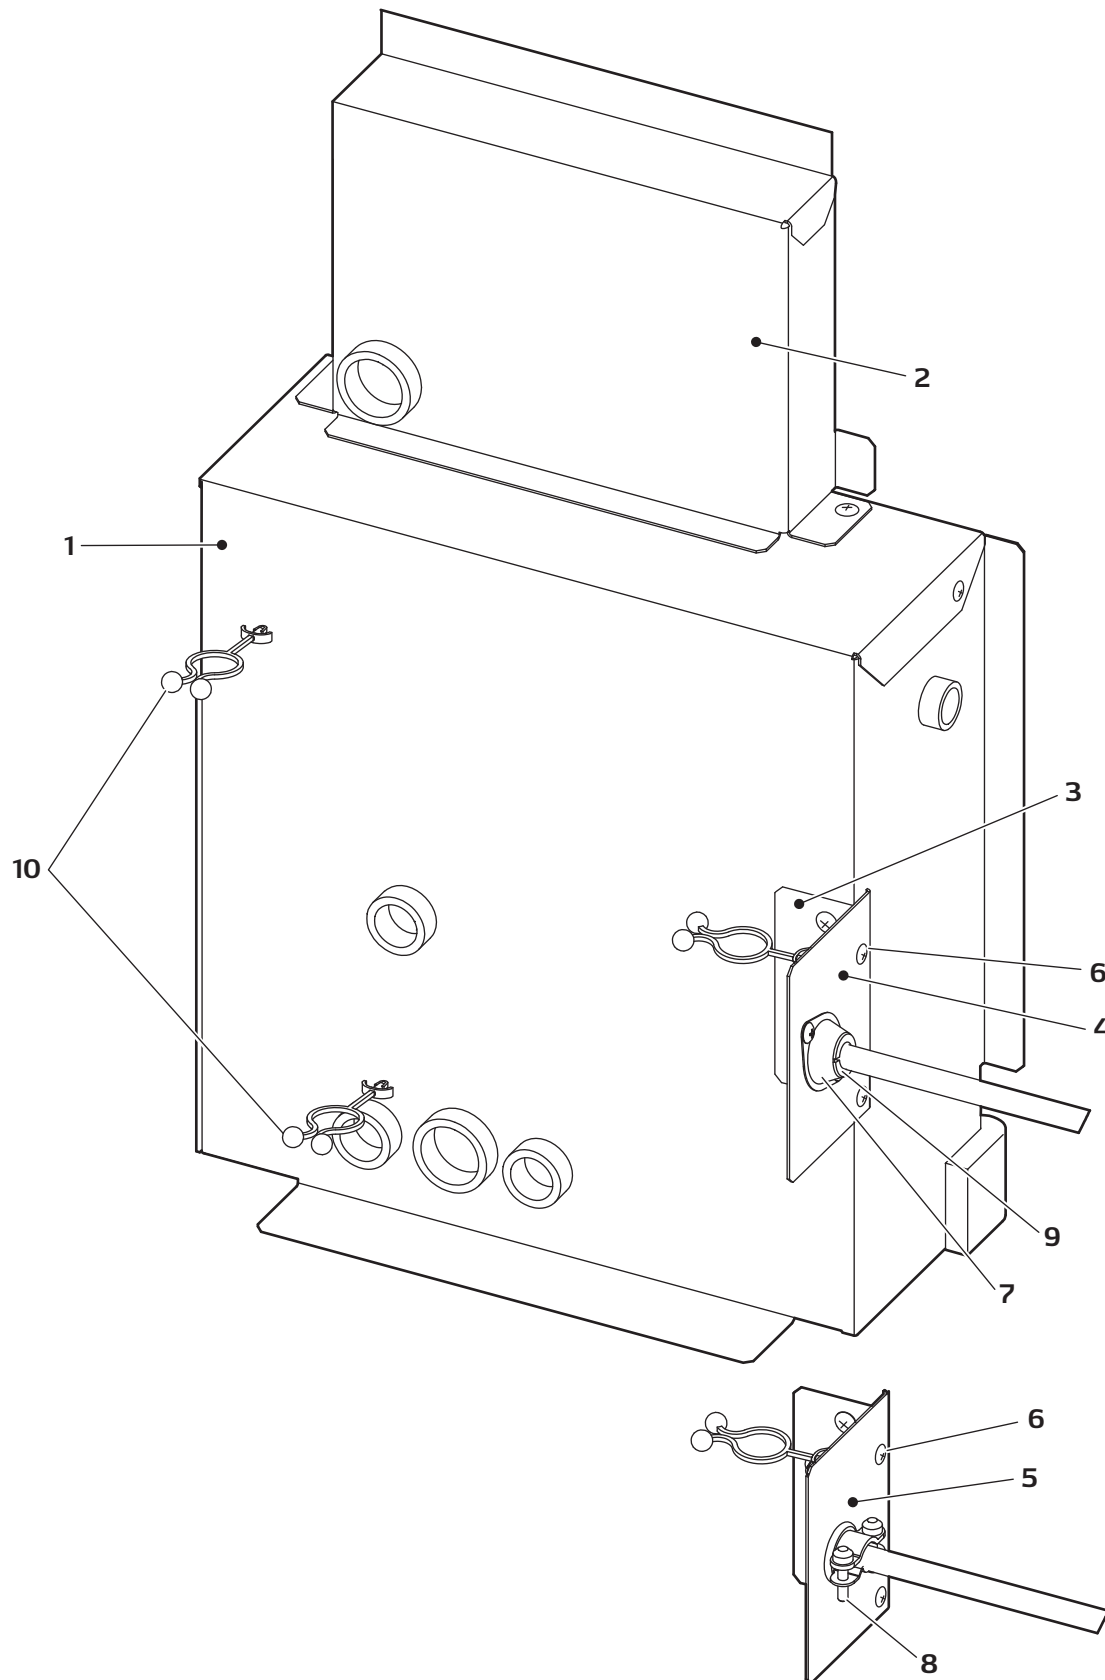

Unit Part No: 484000-4750/ 484000-4751
Unit Serial No. Range: 1119****D18 to 0422****D18

Y029b

Control Box Parts_1


No.	NAMES OF PARTS	PART No.	QTY	S/N RANGE*1	REMARKS*2
1	Service Box	484520-1490	1		w/No.3
2	Service Box	484321-4870	1		For Communication Module
3	Bracket	484321-5200	1		
4	Bracket	484321-5660	1	0520 to Present	
5	Bracket	484321-5220	1	1119 to 0420	
6	Bolt	480919-1820	2		M4 x 0.4, L=10 Black
7	Metal Clip	484917-0012	1	0520 to Present	
8	Connector	479748-0020	1	1119 to 0420	
9	Rubber Grommet	484926-0090	1		
10	Clamp	481902-0070	3		

*1 Refer to page 2 for the position of the serial number on the unit. This column shows the first four digits of the serial number.

*2 Refer to the Reference Table on page 20 for more information on the remarks.

Unit Part No: 484000-4750/ 484000-4751
Unit Serial No. Range: 1119****D18 to 0422****D18

Control Box Parts_2

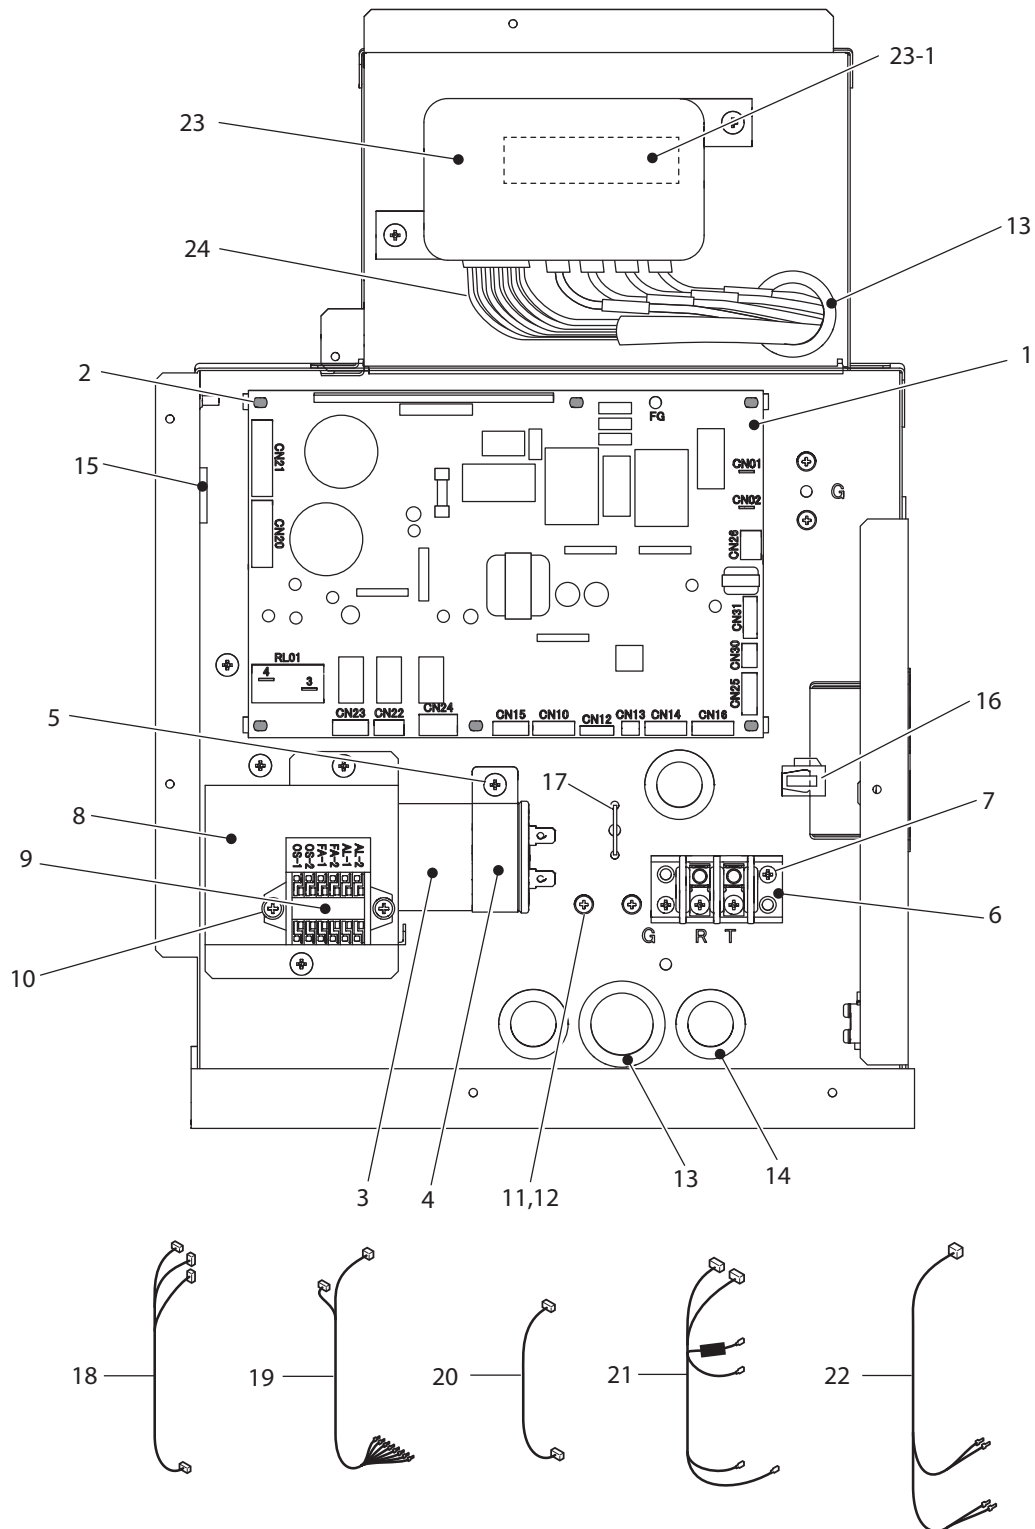

Unit Part No: 484000-4750/ 484000-4751
 Unit Serial No. Range: 1221****D18 to 0422****D18

Y030b

Control Box Parts_2


No.	NAMES OF PARTS	PART No.	QTY	S/N RANGE*1	REMARKS*2
1	Relay Board	484500-5390	1		
2	Support	465586-0220	6		
3	Capacitor, Compressor	484507-2330	1		260VAC, 45μF
4	Holder	482857-0690	1		
5	Bolt	480919-1820	9		M4 x 0.7, L=10 Black
6	Terminal Block	484503-1580	1		For Power
7	Screw	949001-0800	2		M4 x 0.7, L=16
8	Bracket	484320-1100	1		
9	Terminal Block	484503-1660	1		For Input/Output Signal
10	Screw, w/Washer	91370-04101	2		M4 x 0.5, L=10
11	Screw	91051-04080	3		Ground (M4×0.7, L=10)
12	Washer, Plate	90201-04300	2		
13	Grommet	484926-0860	2		Φ26
14	Grommet	949321-3010	3		Φ19
15	Grommet	949321-3000	1		Φ15
16	Connector, Jumper	481950-3460	1		Drain Pump
17	Clamp	481902-0070	1		
18	Wire Assy	481950-3470	1		(RB)↔(TB)
19	Wire Assy	481950-3480	1		(RB)↔(TB)
20	Wire Assy	481950-3500	1		(RB, CC)↔(TB)
21	Wire Assy	481950-3610	1		(RB)↔(TB, HTR, EMV)
22	Wire Assy	481950-3620	1		(RB)↔(CTS1, ODS, CTS3, RTS, CTS2)
23	Communication Module	484500-5012	1		
23-1	Battery	LA420065-0111	1		For Communication Module
24	Wire Assy	481950-3541	1		For Communication Module

*1 Refer to page 2 for the position of the serial number on the unit. This column shows the first four digits of the serial number.

*2 Refer to the Reference Table on page 20 for more information on the remarks.

Unit Part No: 484000-4750/ 484000-4751
Unit Serial No. Range: 1221****D18 to 0422****D18

Control Box Parts_2

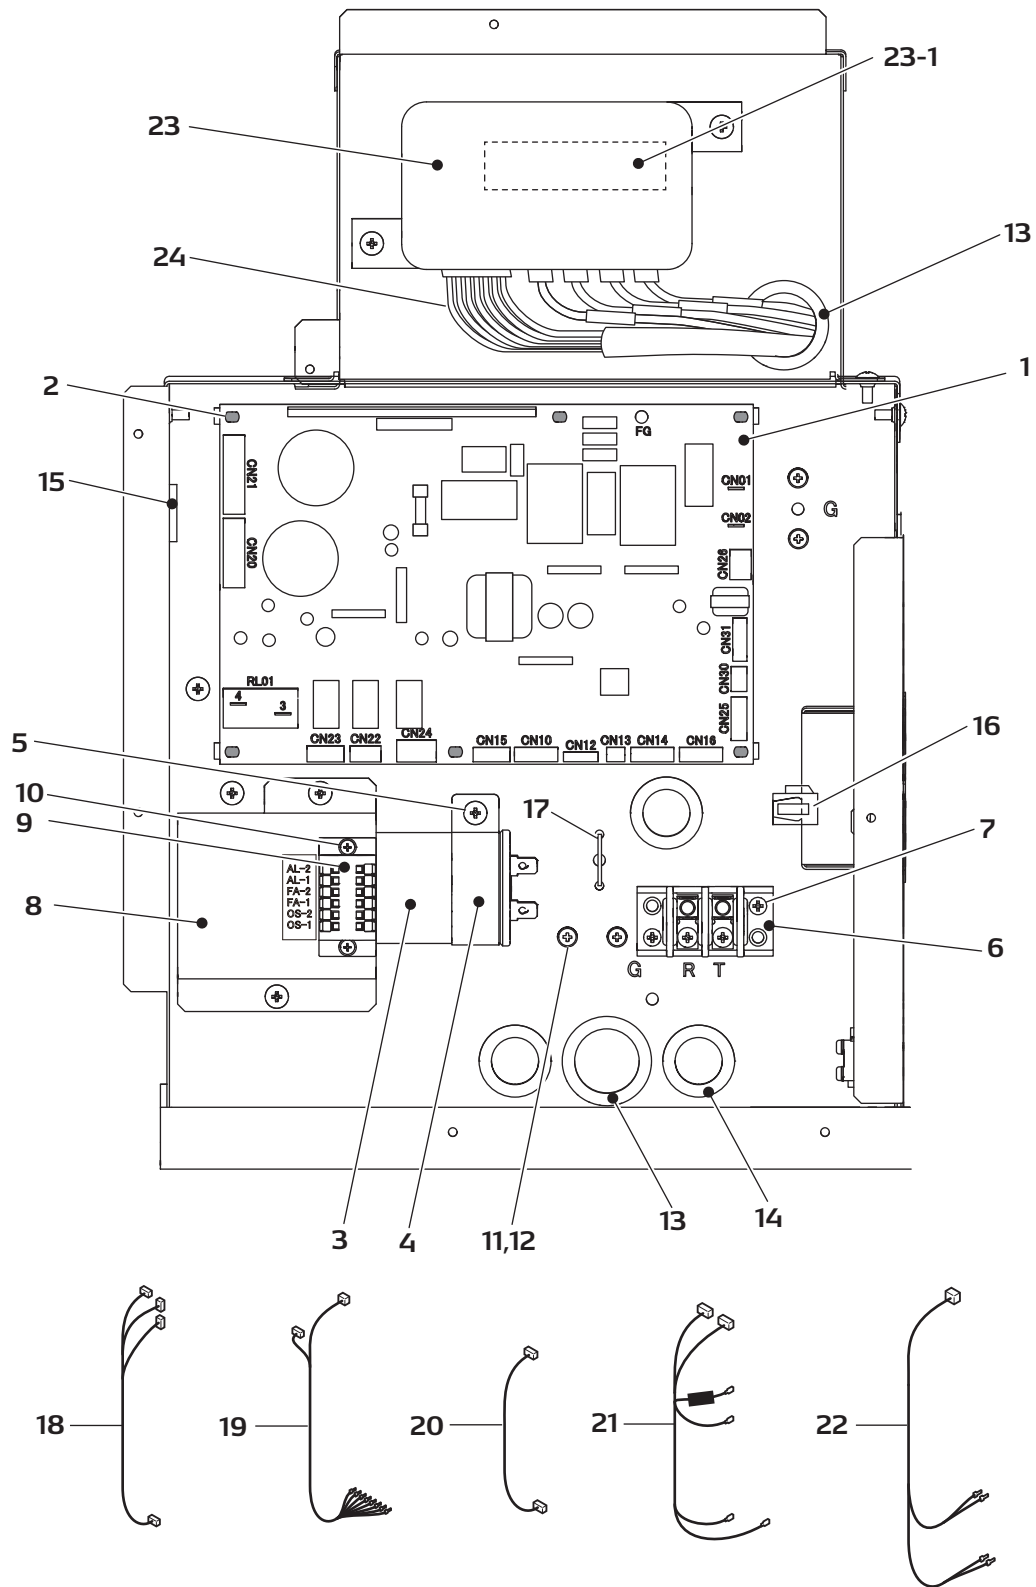

Unit Part No: 484000-4750/ 484000-4751
 Unit Serial No. Range: 1119****D18 to 1121****D18

Y030a

Control Box Parts_2

No.	NAMES OF PARTS	PART No.	QTY	S/N RANGE*1	REMARKS*2
1	Relay Board	484500-5390	1		
2	Support	465586-0220	6		
3	Capacitor, Compressor	484507-2330	1		260VAC, 45μF
4	Holder	482857-0690	1		
5	Bolt	480919-1820	9		M4 x 0.7, L=10 Black
6	Terminal Block	484503-1580	1		For Power
7	Screw	949001-0800	2		M4 x 0.7, L=16
8	Bracket	484320-0960	1		
9	Terminal Block	484503-1570	1		For Input/Output Signal
10	Screw, w/Washer	91370-03081	2		M3 x 0.5, L=8
11	Screw	91051-04080	3		Ground (M4×0.7, L=10)
12	Washer, Plate	90201-04300	2		
13	Grommet	484926-0860	2		Φ26
14	Grommet	949321-3010	3		Φ19
15	Grommet	949321-3000	1		Φ15
16	Connector, Jumper	481950-3460	1		Drain Pump
17	Clamp	481902-0070	1		
18	Wire Assy	481950-3470	1		(RB)↔(TB)
19	Wire Assy	481950-3480	1		(RB)↔(TB)
20	Wire Assy	481950-3500	1		(RB, CC)↔(TB)
21	Wire Assy	481950-3610	1		(RB)↔(TB, HTR, EMV)
22	Wire Assy	481950-3620	1		(RB)↔(CTS1, ODS, CTS3, RTS, CTS2)
23	Communication Module	484500-5012	1		
23-1	Battery	LA420065-0111	1		For Communication Module
24	Wire Assy	481950-3541	1		For Communication Module

*1 Refer to page 2 for the position of the serial number on the unit. This column shows the first four digits of the serial number.

*2 Refer to the Reference Table on page 20 for more information on the remarks.

Unit Part No: 484000-4750/ 484000-4751

Unit Serial No. Range: 1119****D18 to 1121****D18

REFERENCE TABLE

ABBREVIATION	MEANING
CB	Control Board
CC	Capacitor for Compressor
CTS1	Compressor Pipe Thermistor
CTS2	Evaporator Pipe Thermistor
CTS3	Condenser Pipe Thermistor
EMV	4-Way Valve
HTR	Heater for Outdoor Drain Pan
LCDI	Leakage Current Detection Interrupter
ODS	Outdoor Thermistor
RB	Relay Board
RTS	Room Thermistor
TB	Terminal Block

MEMO

DENSO

DENSO PRODUCTS AND SERVICES AMERICAS, INC.

Long Beach, CA 90810
www.movincool.com